



7 215 X1



7 215 X2




7 215 X3

1. USE

Frame plates for fitting on SUNO mechanisms.

2. RANGE

	Aluminium	Black	Dark grey	Brushed aluminium	Patterned black	Champagne	Titane
	7 215 11	7 215 21	7 215 51	7 215 61	7 215 71	7 215 91	7 216 01
	7 215 12	7 215 22	7 215 52	7 215 62	7 215 72	7 215 92	7 216 02
	7 215 13	7 215 23	7 215 53	7 215 63	7 215 73	7 215 93	7 216 03
	7 215 14	7 215 24	7 215 54	7 215 64	7 215 74	7 215 94	7 216 04
	7 215 15	7 215 25	7 215 55	7 215 65	7 215 75	7 215 95	7 216 05

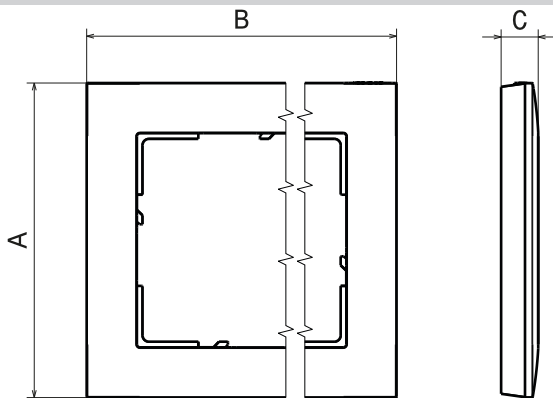3. DIMENSIONS (mm)

References	A	B	C
7 215 X1	83	83	9,8
7 215 X2	83	154	9,8
7 215 X3	83	225	9,8
7 215 X4	83	297	9,8
7 215 X5	83	368	9,8

4. MOUNTING

The plates snap onto the socket adapter or the switch cover. In case of the sockets, the socket cover clamp the frame.

5. TECHNICAL DATA**■ 5.1 Mechanical characteristics**

Impact tests: IK 04

■ 5.2 Material characteristics

Plates: ABS

UV resistant

Halogen free

Self-extinguishing: 650° C / 30 s

■ 5.3 Climatical characteristics

Storage temperature: - 10° C to + 70° C

Use temperature: - 5° C to + 40° C

6. MAINTENANCE

Surface cleaning with a cloth.

Do not use:

Acetone, tar remover, trichloroethylene.

Dish-washer proof.

■ 6.1 Resistance to the following cleaning substances

- Hexane (EN 60669-1),
- Methylated spirit,
- Soapy water,
- Diluted ammonia,
- Diluted pure bleach 10%,
- Glass cleaning product,
- Pre-impregnated wipes.

■ 6.2 Resistance to the following hospital-type cleaning substances

- Anios,
- Surfianos,
- Bactylisine,
- Hydrogen peroxide (oxygenated water 35%).

Caution: A spot test should be carried out before using any other specific cleaners.

7. SPECIAL USE

The plates must not be painted.